

# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

## UNIVERSAL CLUTCH LEVER GUARDS



PART NUMBERS INCLUDED ON THIS SHEET:

CLG-14-A160-GBR / CLG-16-A160-GBR / CLG-16-14-A160-GBR / CLG-18-A160-GBR

 
CLG-A160 (moulded part only)

### UNIVERSAL CLUTCH LEVER GUARD WITH 14mm INSERT (Fits tube inside diameters from 13.6mm to 15.7mm)

#### PART NO. CLG-14-A160-GBR

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

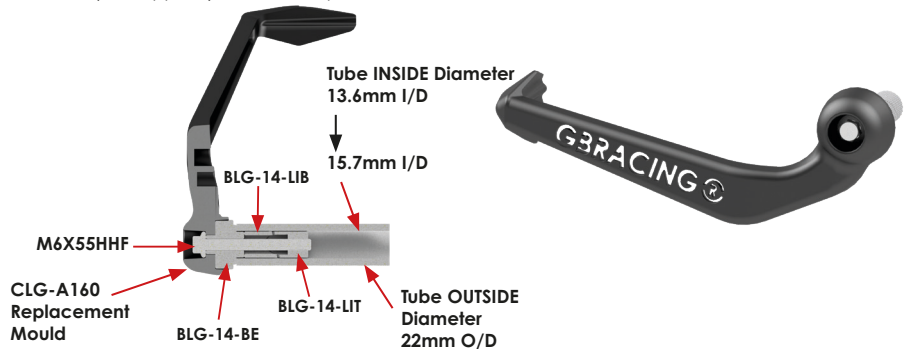


### UNIVERSAL CLUTCH LEVER GUARD WITH 16mm INSERT (Fits tube inside diameters from 15.8mm to 17.9mm)

#### PART NO. CLG-16-A160-GBR

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

 *Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

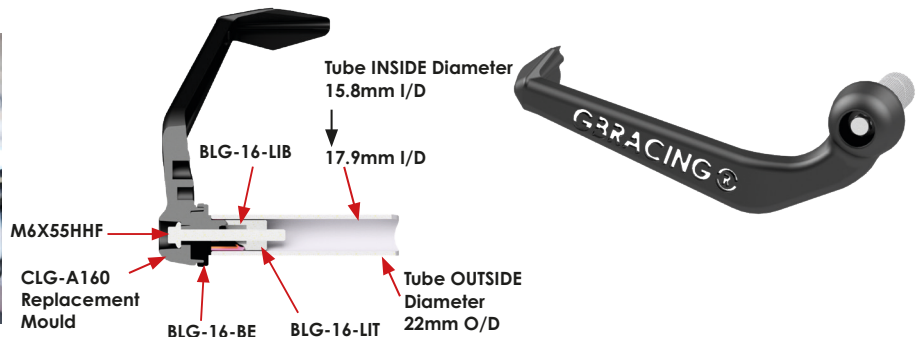


### UNIVERSAL CLUTCH LEVER GUARD WITH 16mm BAR END WITH A 14mm INSERT

#### PART NO. CLG-16-14-A160-GBR (Fits tube inside diameters from 15.8mm to 16.5mm with a smaller stepped internal diameter of 13.6-15.7mm)

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

 *Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

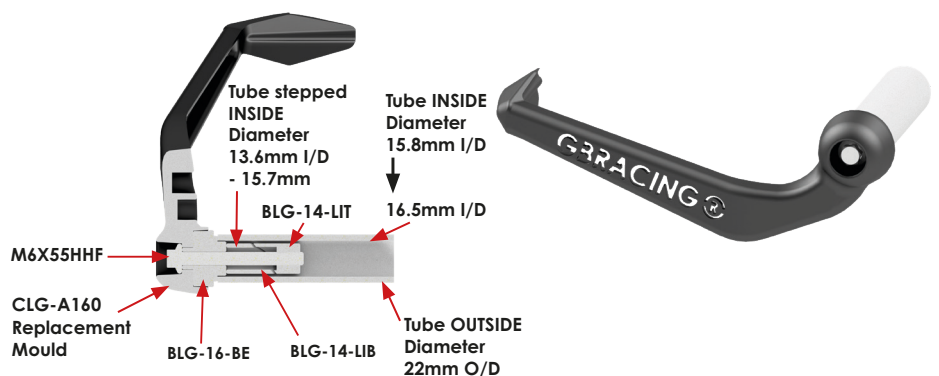

# FITTING INSTRUCTIONS

 
TO BE FITTED BY A QUALIFIED TECHNICIAN

## UNIVERSAL CLUTCH LEVER GUARDS

### UNIVERSAL CLUTCH LEVER GUARD WITH 18mm INSERT (Fits tube inside diameters from 18mm to 20mm) PART NO. CLG-18-A160-GBR

- 1 Remove existing bar end and replace with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

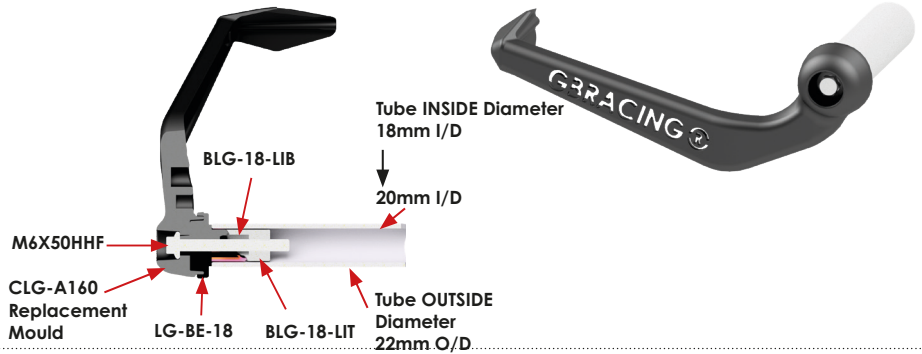


### M18 THREADED CLUTCH LEVER GUARD, 5mm SPACER BAR END, 160mm PART NO. CLG-M18-S5-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in Fig 1.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

 **Fig. 1: ASSEMBLY**

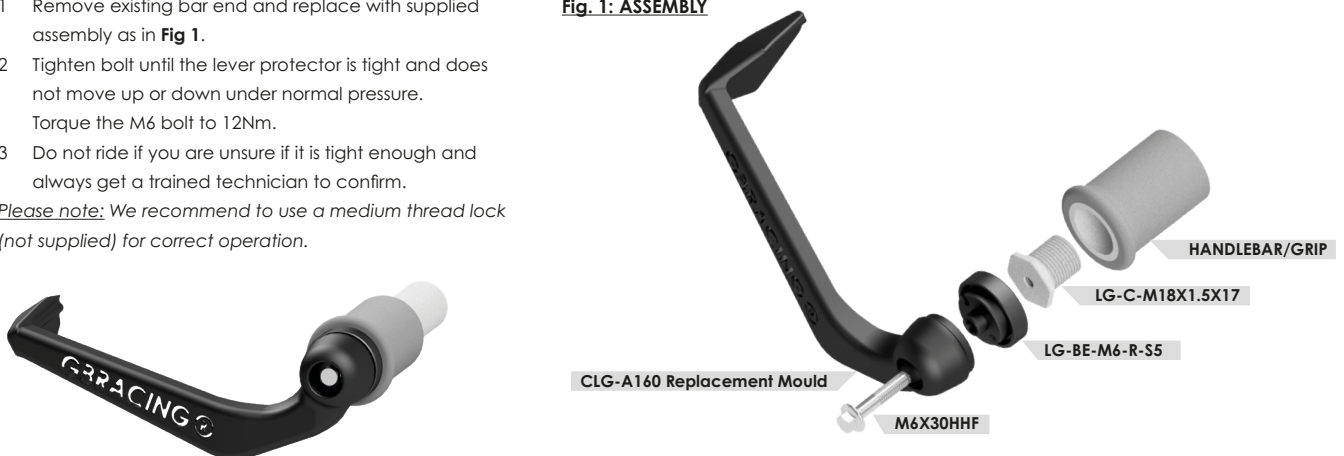

### M18 THREADED CLUTCH LEVER GUARD, 10mm SPACER BAR END, 160mm PART NO. CLG-M18-S10-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in Fig 1.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

**Fig. 1: ASSEMBLY**



# FITTING INSTRUCTIONS

TO BE FITTED BY A QUALIFIED TECHNICIAN

## UNIVERSAL CLUTCH LEVER GUARDS

### M18 THREADED CLUTCH LEVER GUARD, 15mm SPACER BAR END, 160mm PART NO. CLG-M18-S15-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in **Fig 1**.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

**Fig. 1: ASSEMBLY**




### M12 THREADED CLUTCH LEVER GUARD, 10mm SPACER BAR END, 160mm PART NO. CLG-M12-S10-A160-GBR

- 1 Remove existing bar end and replace with supplied assembly as in **Fig 1**.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure. Torque the M6 bolt to 12Nm.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

*Please note:* We recommend to use a medium thread lock (not supplied) for correct operation.

 **Fig. 1: ASSEMBLY**

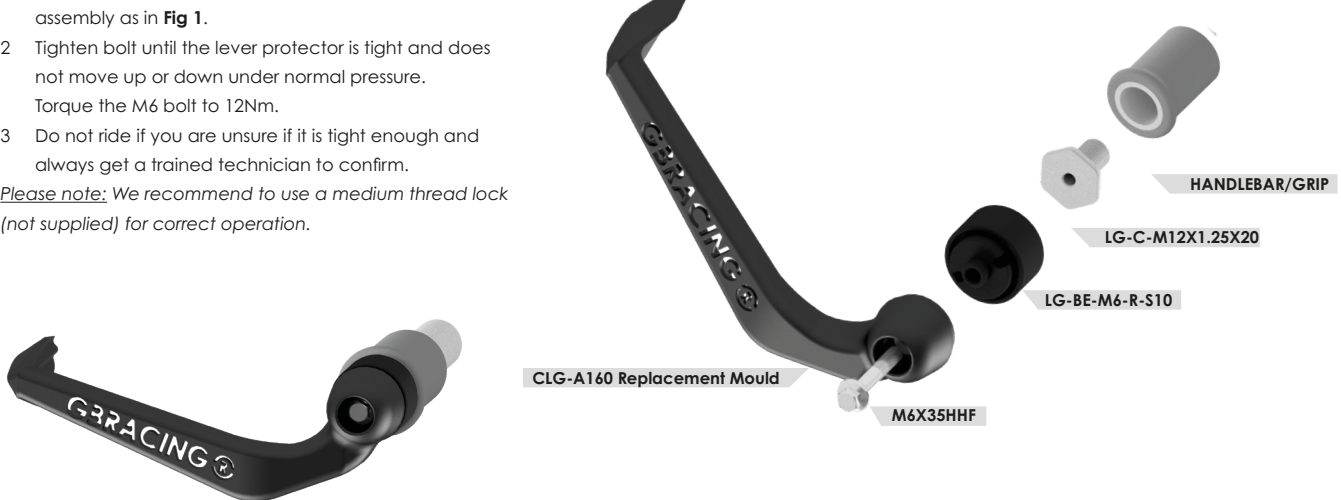

### UNIVERSAL CLUTCH LEVER GUARD, MOULDED REPLACEMENT PART ONLY PART NO. CLG-A160

**This is to be used with the GBRacing bar end and insert**

- 1 Remove existing bar end and replacing it with supplied bar end.
- 2 Tighten bolt until the lever protector is tight and does not move up or down under normal pressure.
- 3 Do not ride if you are unsure if it is tight enough and always get a trained technician to confirm.

