

# UNIVERSAL BRAKE & CLUTCH LEVER GUARDS MEASURING GUIDE

Measure the **INTERNAL DIAMETER** of the brake / clutch lever handlebar end using a ruler or a vernier as shown below:



**Internal diameter** of the handlebar end is between 13.6mm to 15.7mm - See [FIG.1](#)

**Internal diameter** of the handlebar end is between 15.8mm to 17.9mm- See [FIG.1](#)

**Internal diameter** of the handlebar end is between 15.8-16.5mm and has an additional **stepped down tube** inside with an internal diameter of 13.6-15.7mm - See [FIG.2a & 2b](#)

**Internal diameter** of the handlebar end is between 18mm to 20mm - See [FIG.1](#)

YOU NEED THIS PART #  
FOR BRAKE / CLUTCH LEVER:

**BLG-14-A160-GBR**  
Universal Brake Lever Guard /  
**CLG-14-A160-GBR**  
Universal Clutch Lever Guard

**BLG-16-A160-GBR**  
Universal Brake Lever Guard /  
**CLG-16-A160-GBR**  
Universal Clutch Lever Guard

**BLG-16-14-A160-GBR**  
Universal Brake Lever Guard /  
**CLG-16-14-A160-GBR**  
Universal Clutch Lever Guard

**BLG-18-A160-GBR**  
Universal Brake Lever Guard /  
**CLG-18-A160-GBR**  
Universal Clutch Lever Guard

FIG.1

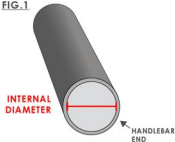


FIG.2a

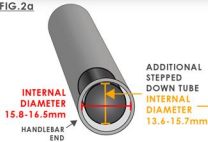


FIG.2b

